


Ink Pad Replacement Quick Start Guide

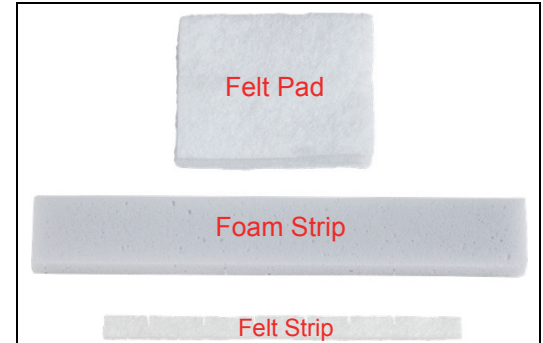


IMPORTANT! Check the ink pads periodically for excessive ink saturation and replace when necessary.


Note: It is recommended to replace the ink pads after 20,000 prints.

Order Ink Pad Replacement Kit J20-PAD

1. Turn off power and remove power cord.
2. Carefully turn printer over and remove the two screws on the metal cover.

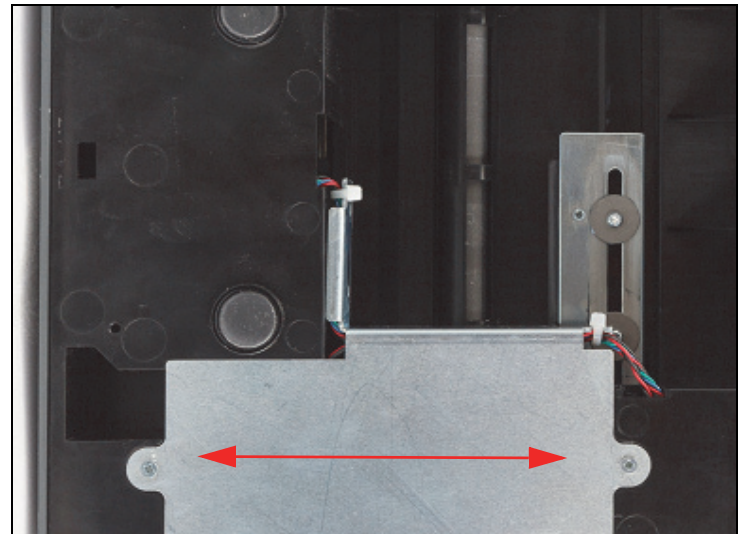

3. Remove old felt pad and foam strip.
4. Fold new foam pad and fit into channel as shown.

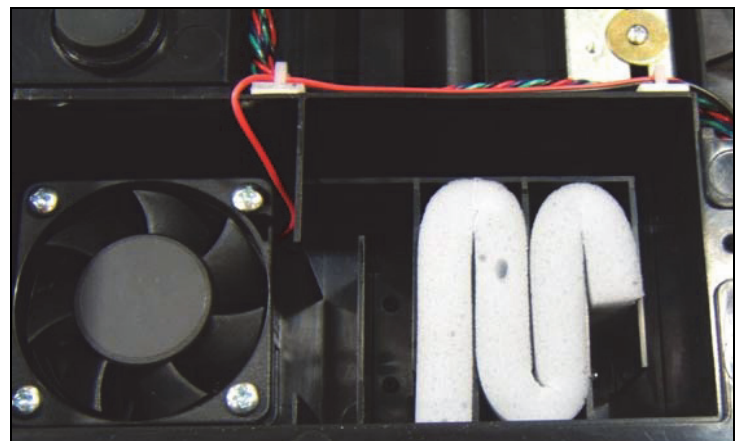


BradyJet J2000

COLOR LABEL PRINTER

5. Place new felt pad square into opening.
6. Replace cover and fasten both screws.




7. Turn printer right side up and open cover.
8. Slide the print head to the left.
9. Use a needle-nose pliers or similar tool to pull old felt strip out of its trough.

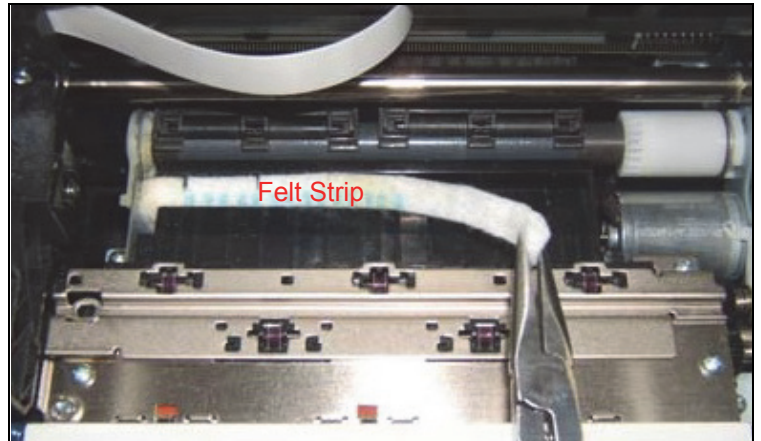

IMPORTANT! Observe the notches on the felt strip.

10. Slide the end of the felt strip without notches into opening, as shown.

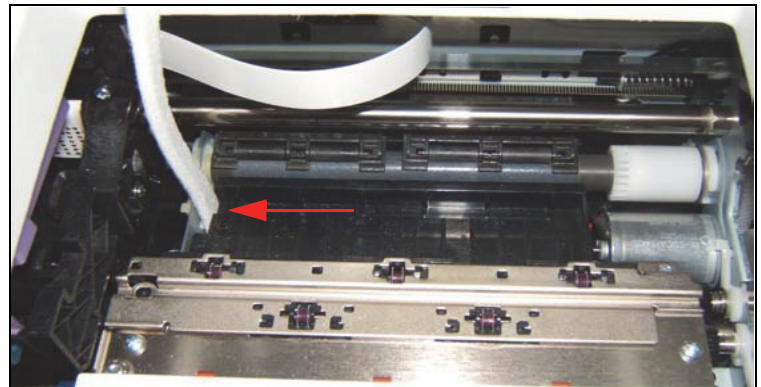

11. Fold felt strip down into trough so small tabs fit into notches on felt.
12. Use a needle-nose pliers or similar tool to press felt securely into place.

